



# *Spare parts suitable for:* **ROKA**

## *Spare parts suitable for modular ranges*



## *Spare parts suitable for small appliances and single devices*



 
**G.E.V. Großküchen-Ersatzteil-Vertrieb GmbH**  
Robert-Koch-Straße 3a  
82152 Planegg/Munich  
Germany

Phone: +49 (0)89 745572-0  
Fax: +49 (0)89 745572-83  
order@gev-online.com  
www.gev-online.com

Member of the  **GEV GROUP**

Suitable for Roka

## Open tops (electric)

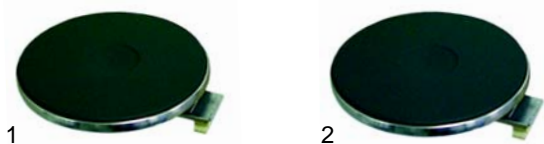

Item	Order	Description	Model	OEM
1	490016	2000W/230V	4804	8900371
2	490020	2600W/230V		8900370




Item	Order	Description	Model	OEM
1	300025	switch (7-tacts)	4804	8900220
2	110111	knob		-
3	359854	signal lamp		8900426
4	359606	glow lamp		-

## Fry tops (electric)



 Item	Order	Description	Model	OEM
1	418235	1600W/230V	1805	8900322
2	418234	1200W/230V	1807	8900323
3	359854	signal lamp	universal	-
4	359606	glow lamp		-

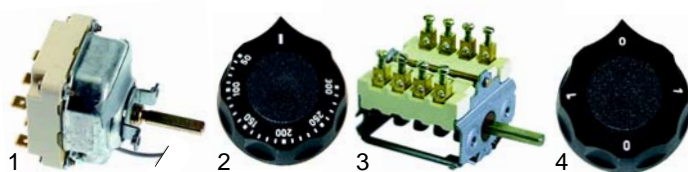

Item	Order	Description	Model	OEM
1	375693	thermostat	1805, 1807	8900211
2	110114	knob, 300°C		-
3	300021	switch		8900302
4	110113	knob		-

## Chargrills (electric)



Item	Order	Description	Model	OEM
1	415676	400W/230V	1505, 1507, 1509, 1511	8900326
2	211071	shelf		8900580
3	380213	contactor		8900310

 


Item	Order	Description	Model	OEM
1	380015	energy regulator	1505, 1507,	8900215
2	110117	knob		-
3	359855	signal lamp/green	1509,	8900425
4	359854	signal lamp/yellow	1511	8900426
5	359606	glow lamp		

## Bratt pans (electric)



Item	Order	Description	Model	OEM
1	418234	1200W/230V	2404,	8900323
2	359855	signal lamp	2414	8900425
3	359606	glow lamp		

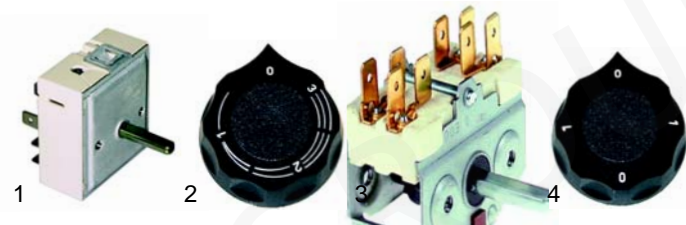


Item	Order	Description	Model	OEM
1	380015	energy regulator	2404, 2414	8900215
2	110117	knob		-
3	300074	switch		8900301
4	110113	knob		

**Bains-marie**

 
**Fryers (electric)**




Item	Order	Description	Model	OEM
1	415675	2000W/230V	2704 (old)	8900341
2	415375	3000W/230V	2707 (old)	8900342
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-

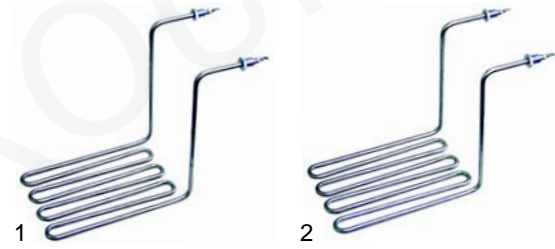


Item	Order	Description	Model	OEM
1	415365	3300W/230V (outer)	old devices	-
2	415366	3300W/230V (inner)		-

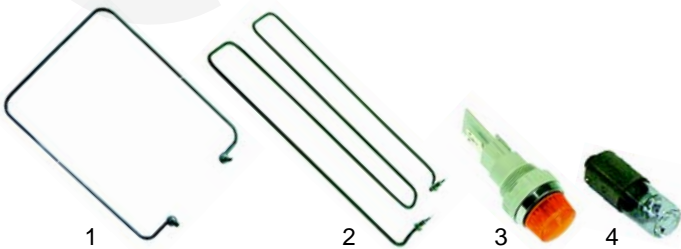 

Item	Order	Description	Model	OEM
1	415669	2000W/230V	2704 (new)	8900324
2	415672	3000W/230V	2707 (new)	8900325
3	359854	signal lamp	universal	8900425
4	359606	glow lamp		-

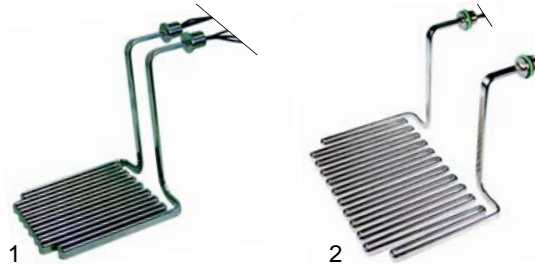 

Item	Order	Description	Model	OEM
1	415792	6000W/400V	1004, 1006	8900350
2	418237	9900W/400V	1005	8900351

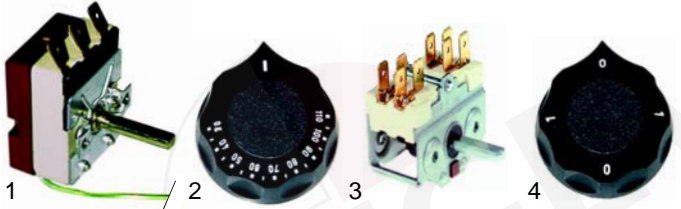 


Item	Order	Description	Model	OEM
1	375007	thermostat		8900202
2	110116	knob	2704,	-
3	300074	switch	2707	8900301
4	110113	knob		-




Item	Order	Description	Model	OEM
1	375694	safety thermostat	1004,	8900253
2	375512	thermostat	1005,	8900210
3	110115	knob	1006	-

**Chip scuttle tops**

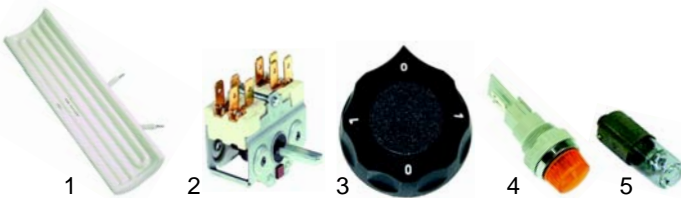 

Item	Order	Description	Model	OEM
1	415103	650W/230V		8900319
2	300074	switch		8900301
3	110113	knob	3204	-
4	359854	signal lamp		8900425
5	359606	glow lamp		-

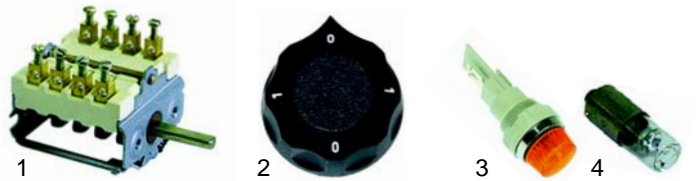 


Item	Order	Description	Model	OEM
1	300021	switch		8900302
2	110113	knob	1004,	-
3	359854	signal lamp	1005,	8900425
4	359606	glow lamp	1006	-



Item	Order	Description	Model	OEM
1	970441	fryer basket		8900104
2	550004	capillary pipe clamp		8900541
3	550043	sensor clamp		8999998

R

## Salamander (electric)

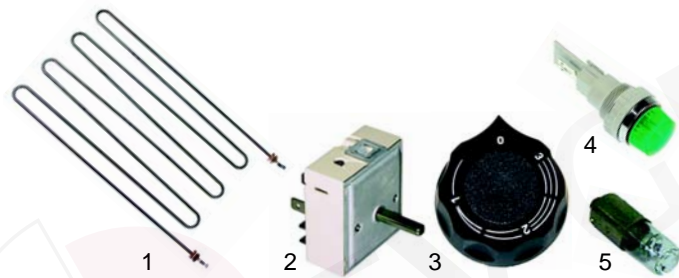 


Item	Order	Description	Model	OEM
1	418236	2600W/230V		3900328
2	380015	energy regulator		8900215
3	110117	knob	6397	
4	359855	signal lamp/green		8900425
5	359606	glow lamp		8900425




Item	Order	Description	Model	OEM
1	375005	thermostat		8900203
2	110109	knob		-
3	300074	switch		8900301
4	110113	knob		-

## Hot cupboards

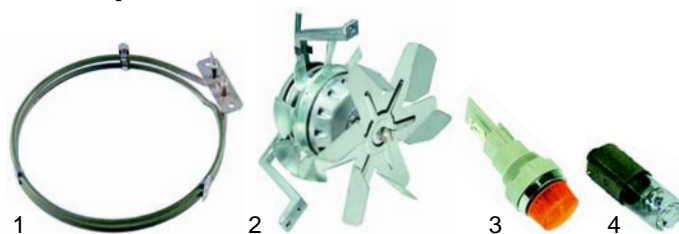 

Item	Order	Description	Model	OEM
1	418240	1300W/230V		8900327
2	601151	motor/complete		8900360
3	359854	signal lamp		8900426
5	359606	glow lamp		-

## Food warmers

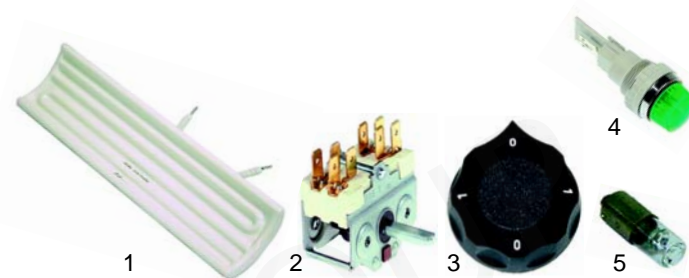 

Item	Order	Description	Model	OEM
1	415102	400W/230V		8900380
2	300074	switch		8900301
3	110113	knob		
4	359855	signal lamp/green		8900425
5	359606	glow lamp		-

